

[Palm Sideboard](#) [1]

Submitted by [Georgia M](#) [2] on Tue, 2013-02-19 22:02



[1]

Plans for a fun, unique sideboard. It's a great way to add an eclectic twist to any room! It has a cupboard on each end and three drawers in the center. Build your own with More Like Home!

<http://www.morelikehome.net/2013/02/palm-sideboard-plans.html> [3]

Summary:

Plans for a fun, unique sideboard. It's a great way to add an eclectic twist to any room! It has a cupboard on each end and three drawers in the center. Build your own with More Like Home!

<http://www.morelikehome.net/2013/02/palm-sideboard-plans.html> [3]

Categories **Project Type:** [Side Tables](#) [4]

[Buffet](#) [5]

Room: [dining room](#) [6]



Palm Sideboard

Published on Ana White (<http://ana-white.com>)

[living room](#) [7]


Skill Level: [Intermediate](#) [8]

Style: [Modern](#) [9]

Estimated Cost: [\\$150 - \\$200](#) [10]

Dimensions: 68 1/4" wide x 31" tall x 19 3/4" deep

Dimensions:

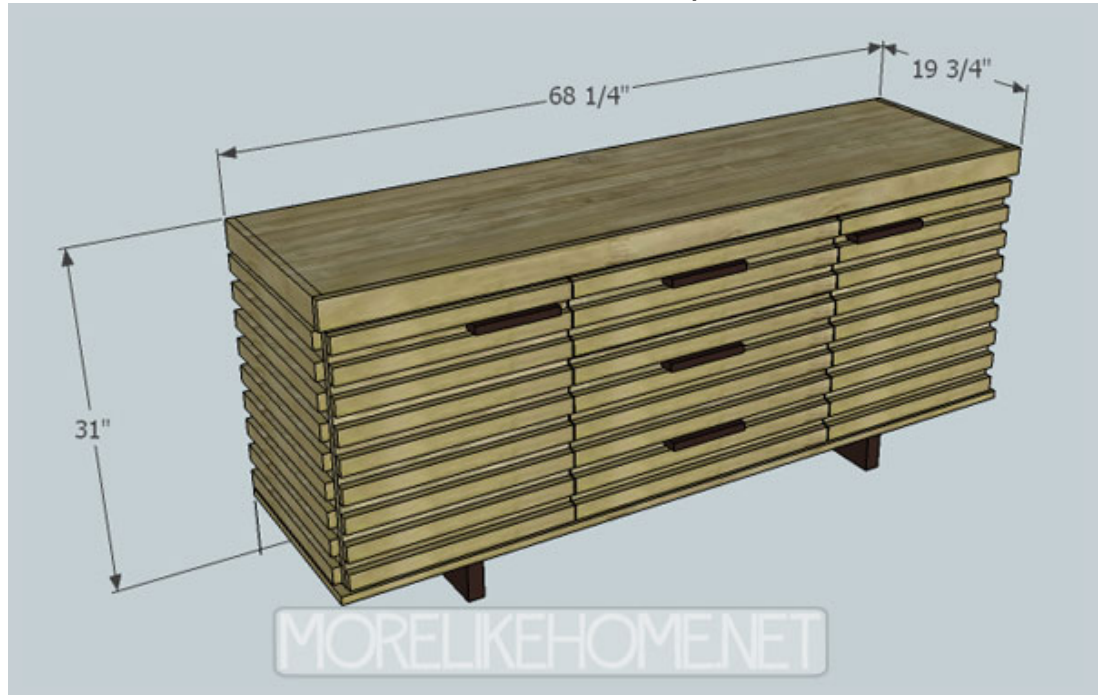

General Instructions:

Please read through the entire plan and all comments before beginning this project. It is also advisable to review the Getting Started Section. Take all necessary precautions to build safely and smartly. Work on a clean level surface, free of imperfections or debris. Always use straight boards. Check for square after each step. Always predrill holes before attaching with screws. Use glue with finish nails for a stronger hold. Wipe excess glue off bare wood for stained projects, as dried glue will not take stain. Be safe, have fun, and ask for help if you need it. Good luck!

Finishing Instructions
Preparation Instructions: Fill all holes with wood filler and let dry. Apply additional coats of wood filler as needed. When wood filler is completely dry, sand the project in the direction of the wood grain with 120 grit sandpaper. Vacuum sanded project to remove sanding residue. Remove all sanding residue on work surfaces as well. Wipe project clean with damp cloth. It is always recommended



Palm Sideboard

Published on Ana White (<http://ana-white.com>)

to apply a test coat on a hidden area or scrap piece to ensure color evenness and adhesion. Use primer or wood conditioner as needed.

Source URL: <http://ana-white.com/2013/02/plans/palm-sideboard>

Links

- [1] <http://ana-white.com/2013/02/plans/palm-sideboard>
- [2] <http://ana-white.com/users/georgia-m>
- [3] <http://www.morelikehome.net/2013/02/palm-sideboard-plans.html>
- [4] <http://ana-white.com/category/plans/project-type/side-tables>
- [5] <http://ana-white.com/category/plans/project-type/buffet>
- [6] <http://ana-white.com/category/plans/room/dining-room>
- [7] <http://ana-white.com/category/plans/room/living-room>
- [8] <http://ana-white.com/category/plans/skill-level/intermediate>
- [9] <http://ana-white.com/category/plans/style/modern>
- [10] <http://ana-white.com/category/plans/estimated-cost/150-200>